


NOTE 1 Remove JP1 to make U1A gain = 1 for testing position sensor.
 NOTE 2 Loop Test Signal Injection Point - Jump 1-2 for normal operation
 NOTE 3 Wire 1-2 for new loop configuration, 2-3 for old.

 Seismic Systems	FORCE BALANCE SEISMOMETER	
	YUMA 2	
DF NELSON	REV 4.0 10-16-2014	For circuit board 10-16-2014